

Operation Guide:

1: Normal Operation

Adjust the desk to the desired height using the ↑ or ↓ button

2: Setting the memory

Press the "M" button till the display screen flashing and then press "1" button

Position 1 is now stored

Repeat above procedure for positions 2, 3, 4

Then press "1", "2", "3", "4" button and the desktop will stop at the preset height.


3: System reset

In some circumstance, you may need to reset the system

Reset procedure is as follows: press and hold ↑ and ↓ button together until table lowers to it minimum height follow by a beep sound.

4: Maintenance

Keep controller away from water.

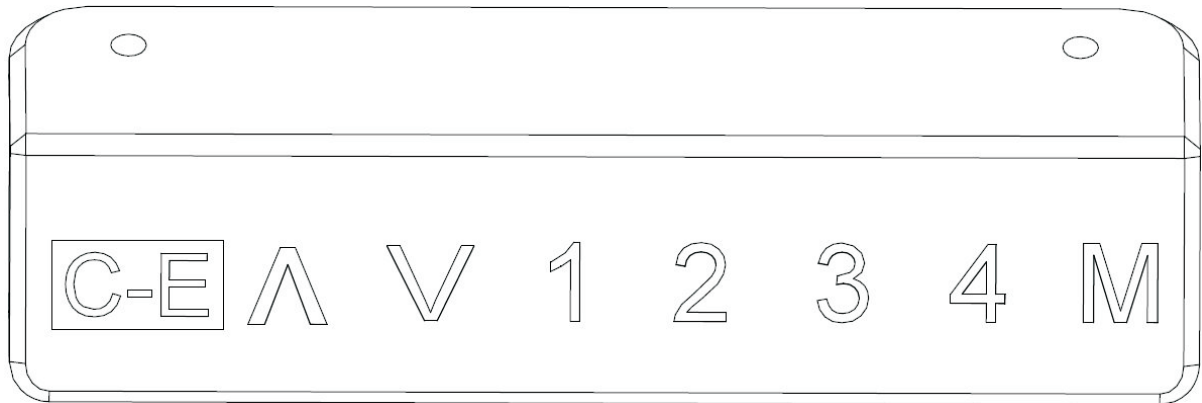

5: INCH to CM display

Press the "1", "2", "M" buttons together for about 5 seconds, controller will display "C-E" flashing.

Press "1" to switch to cm

Press "2" to switch to inch

If above procedures is not operate within 5 seconds, then the system will revert back to original setting